




• Push-through Ratchet

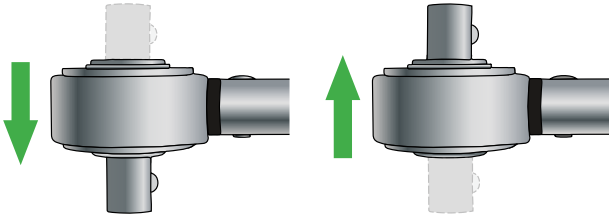


• Automotive Ratchet

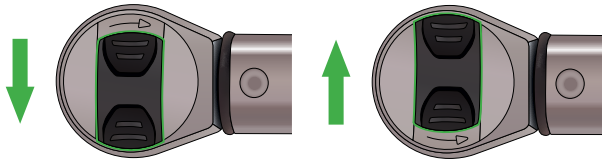


• Spigot End

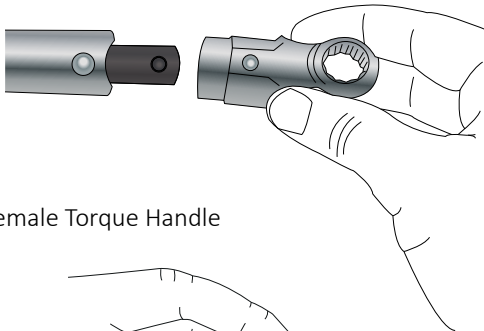

• Female Torque Handle

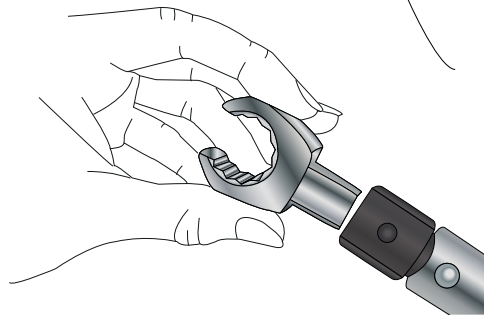

Professional 'P' Type
Torque Wrenches

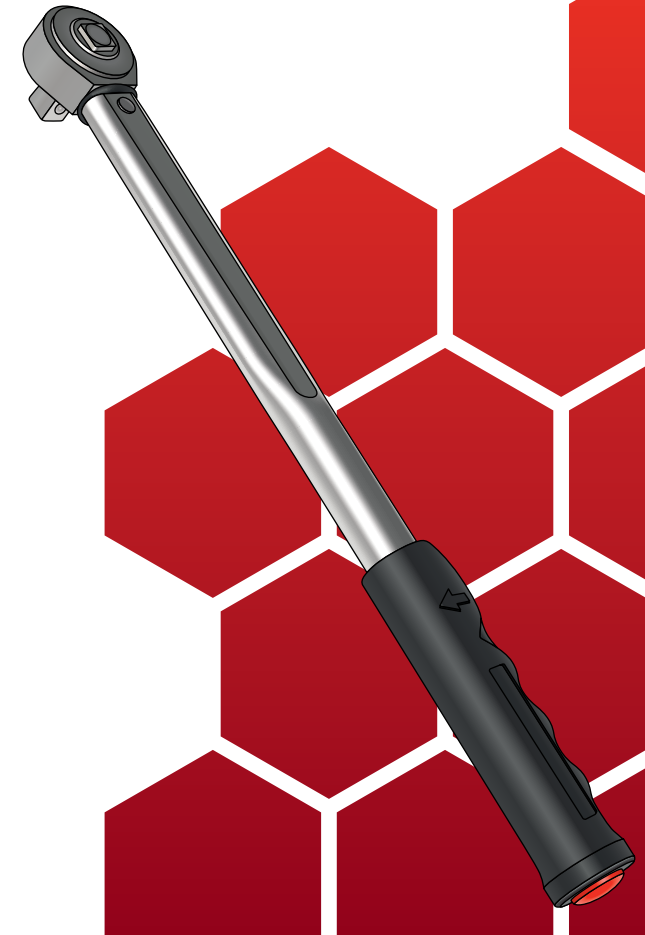

NORBAR TORQUE TOOLS LTD
Wildmere Road, Banbury,
Oxfordshire, OX16 3JU
UNITED KINGDOM
Tel + 44 (0)1295 270333
Email enquiry@norbar.com



NORBAR TORQUE TOOLS PTE LTD
194 Pandan Loop
#07-20 Pantech Business Hub
SINGAPORE 128383
Tel + 65 6841 1371
Email enquires@norbar.sg



NORBAR TORQUE TOOLS
45-47 Raglan Avenue, Edwardstown,
SA 5039
AUSTRALIA
Tel + 61 (0)8 8292 9777
Email enquiry@norbar.com.au



NORBAR TORQUE TOOLS (SHANGHAI) LTD
91 Building-7F, No.1122 North Qinzhou Rd,
Xuhui District, Shanghai
CHINA 201103
Tel + 86 21 6145 0368
Email sales@norbar.com.cn



NORBAR TORQUE TOOLS INC
36400 Biltmore Place, Willoughby,
Ohio, 44094
USA
Tel + 1 866 667 2279
Email inquiry@norbar.us



NORBAR TORQUE TOOLS INDIA PVT. LTD
Plot No A-168, Khairne Industrial Area,
Thane Belapur Road, Mahape,
Navi Mumbai - 400 709
INDIA
Tel + 91 22 2778 8480
Email enquiry@norbar.in



View our 'How to Use a Torque Wrench'
Video at:
www.norbar.com/HowtoUseATorqueWrench

1




- Remove seal
- Enlevez le scellé
- Entfernen der sicherungskappe
- rimovere la tenuta
- Retirar junta

3



- Adjust
- Régler
- Einstellen
- Regolare
- Ajustar


5

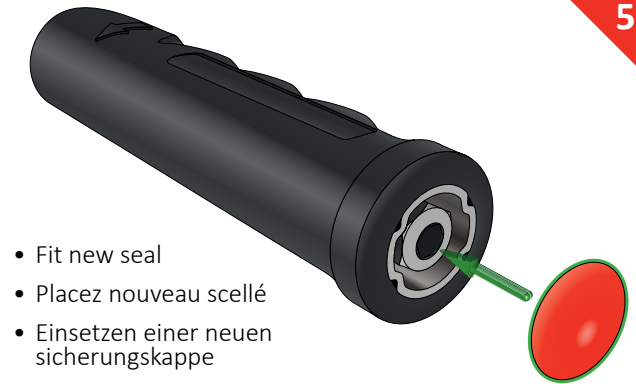

- Fit new seal
- Placez nouveau scellé
- Einsetzen einer neuen sicherungskappe
- Montare la nuova tenuta
- Colocar la nueva junta


2

- Unlock
- Déverrouiller la mollette
- Entsichern
- Sbloccare
- Desbloquear

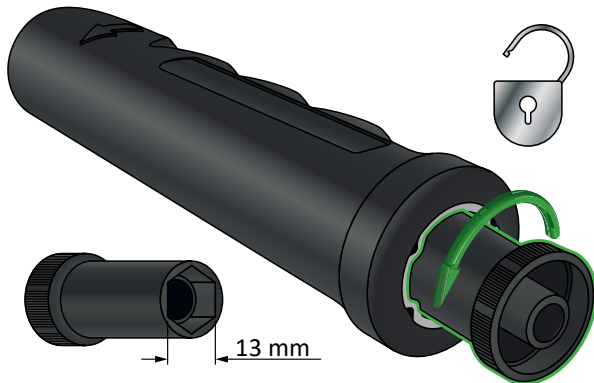

4

- Lock
- Verrouiller la molette
- Sichern
- Bloccare
- Bloquear

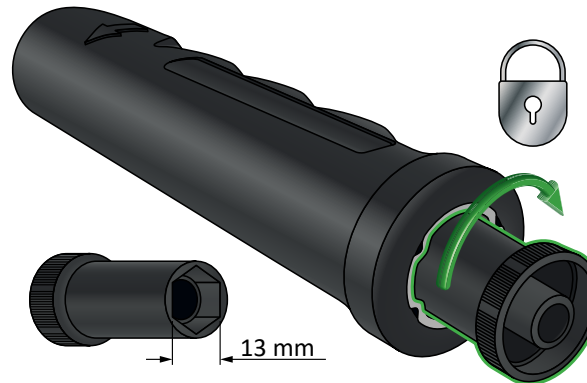

6

- Pull smoothly on the handle in direction indicated by arrow
- Tirer doucement sur la poignée dans le sens de la flèche
- Drücken Sie langsam auf den Handgriff in die Richtung, welche durch den Pfeil
- Tirare lentamente sulla manopola nella direzione indicata dalla freccia
- Tire suavemente del mango en la dirección de la flecha

